



To Test the power supply:

- Unplug any devices that are connected to the power supply
- Unplug the 20 pin ATX connector from the motherboard
- Plug the tester into the power supply's 20 pin ATX connector
- If the POWER_OK LED lights up, the power supply is working

Antec
Accessories

ATX Power Supply Tester

- Built-in on/off switch to allows quick and easy testing
- Built-in 25W 5.4 ohm load to generate steady outputs
- POWER_OK green LED indicates power supply is working
- +5V, +3.3V & +12V leads for volt metering to check output voltages

Antec
ELECTRONIC SYSTEMS

Antec
Accessories

ATX Power Supply Tester

To test the power supply:


- Unplug any devices that are connected to the power supply
- Unplug the 20-pin ATX connector from the motherboard
- Plug the tester into the power supply's 20-pin ATX connector
- Turn the switch to ON position
- If the POWER_OK LED lights up, the power supply is working

To measure the voltages, you will need a volt meter. With the Tester on and the power supply running:

- Turn the volt meter dial to VDC
- Insert the black (-) pole to the COM lead and red (+) pole to the +5V lead as indicated on the diagram to read the voltage reading of the +5V
- Keeping the black pole at the COM position, change the red pole to +3.3V or +12V to measure the voltages

Antec, Inc. Technical Support: 1-800-222-6832 www.antec-inc.com

TEST AT THESE LOCATIONS:

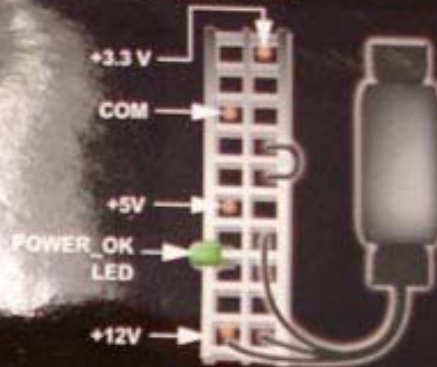

ATX PS Tester



Made in China

Warning!

- Unplug any devices that are connected to the power supply before testing, due to potential overload and fire hazard.
- This tester will generate heat. Don't leave the tester connected to the power supply unattended.

www.antec-inc.com

Antec
The High Performance Power Source

Antec
Accessories

ATX Power Supply Tester


To test the power supply:

- Unplug any devices that are connected to the power supply
- Unplug the 20-pin ATX connector from the motherboard
- Plug the tester into the power supply's 20-pin ATX connector
- Turn the switch to ON position
- If the POWER_OK LED lights up, the power supply is working

To measure the voltages, you will need a volt meter. With the Tester on and the power supply running:

- Turn the volt meter dial to VDC
- Insert the black (-) pole to the COM lead and red (+) pole to the +5V lead as indicated on the diagram to read the voltage reading of the +5V
- Keeping the black pole at the COM position, change the red pole to +3.3V or +12V to measure the voltages

TEST AT THESE LOCATIONS:

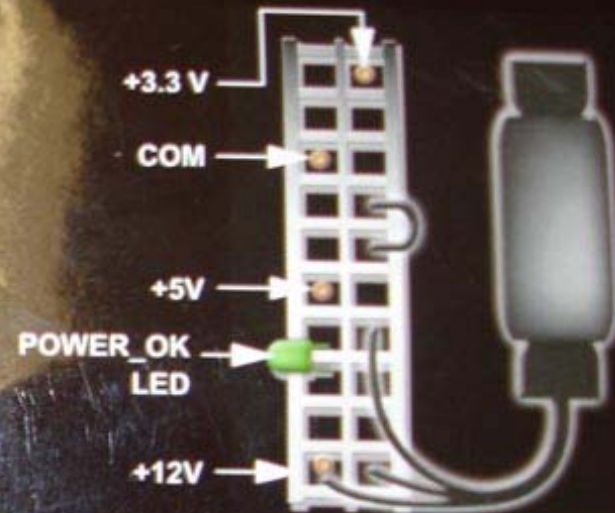

ATX PS Tester



7 61345 77003 3

Antec, Inc. Technical Support: 1-800-222-6832 www.antec-inc.com

Made in China